





rr-226-fo-st

english

**Bluetooth
connection**

Bluetooth connection to the radiofonografo

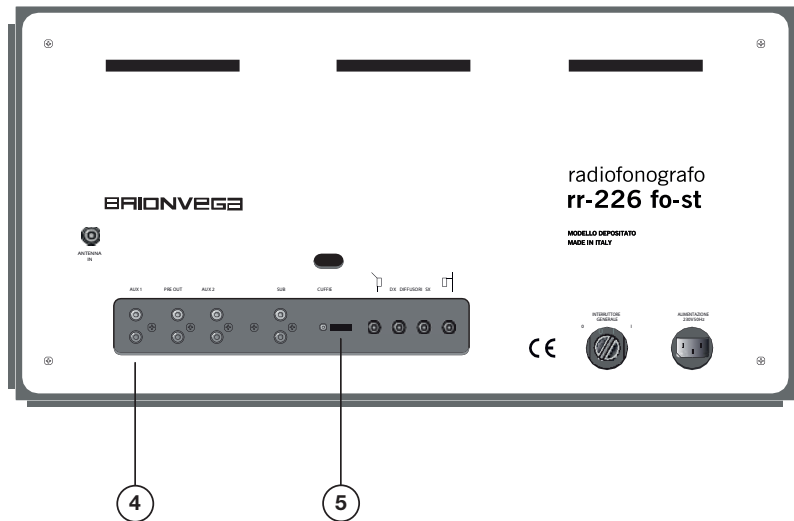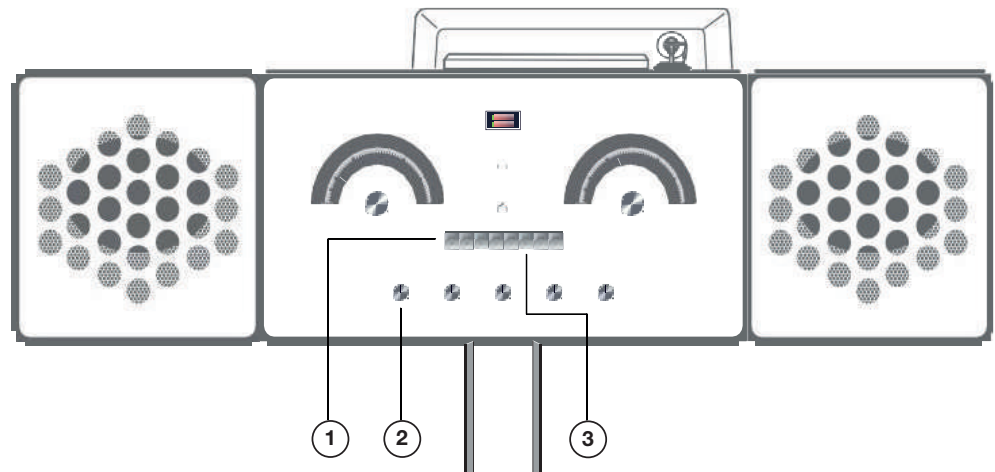

- ① Control push-button panel ON
 - ② Volume level
 - ③ Control push-button panel AUX 1
 - ④ Auxiliary audio input (AUX1)
 - ⑤ USB 500 mA 5V
-

Bluetooth connection to the radiofonografo

The “ADVANCE” “WX700” device is included in the radiofonografo packaging, which allows the transmission of bluetooth audio in HD from any external device with bluetooth technology.

Included in the packaging:

1. “ADVANCE” device “WX700”
2. Transformer with three standard adapters
3. USB cable
4. AUX connectors



Instructions for connecting the “WX700” device to the radiofonografo:

1. Insert the two connectors ④ (supplied) into the AUX1 input ④, located on the back of the radiofonografo.
2. Connect the “WX700” ① device to the connectors previously inserted in the input AUX1. **N.B.** For correct installation, the “WX700” device must be connected in such a way that the “left” and “right” channels correspond to the same channels in the radiophonografo. The channels are indicated on the device (see image ⑤).
3. Connect the “WX700” device to the transformer supplied ②, or using the supplied USB cable ③, connect it to the USB 5V ⑤ output on the back of the radiofonografo.
4. Switch on the radiofonografo by pressing the “on” ① button on the front keyboard of the radiofonografo.
5. At this point the “WX700” device will begin to flash and it will be possible to connect it to any external bluetooth device.
6. Press the AUX1 ③ button on the front keyboard of the radiofonografo.
7. It is now possible to play music via bluetooth through the radiofonografo. Use the “volume” knob ② on the radiofonografo to raise or lower the loudness of the music.

Consult the manual supplied with the “WX700” device for further product information.

HEADQUARTERS:

SIM2 BV International Srl

Via Udine 59

33061 Rivignano Teor (UD) - Italy

Tel. +39.0434.383292

info@brionvega.com

www.brionvega.it

BRIONVEGA PERMANENT

SHOW ROOM:

@ MetroQuality

Via Solferino, 24

20121 Milano (MI)

Tel. +39.02.36742630

By appointment only: please call +39.388.0522627

cod. 461258100